


## Torque arm installation instruction

Please see the following picture which shows the components of Torque arm.

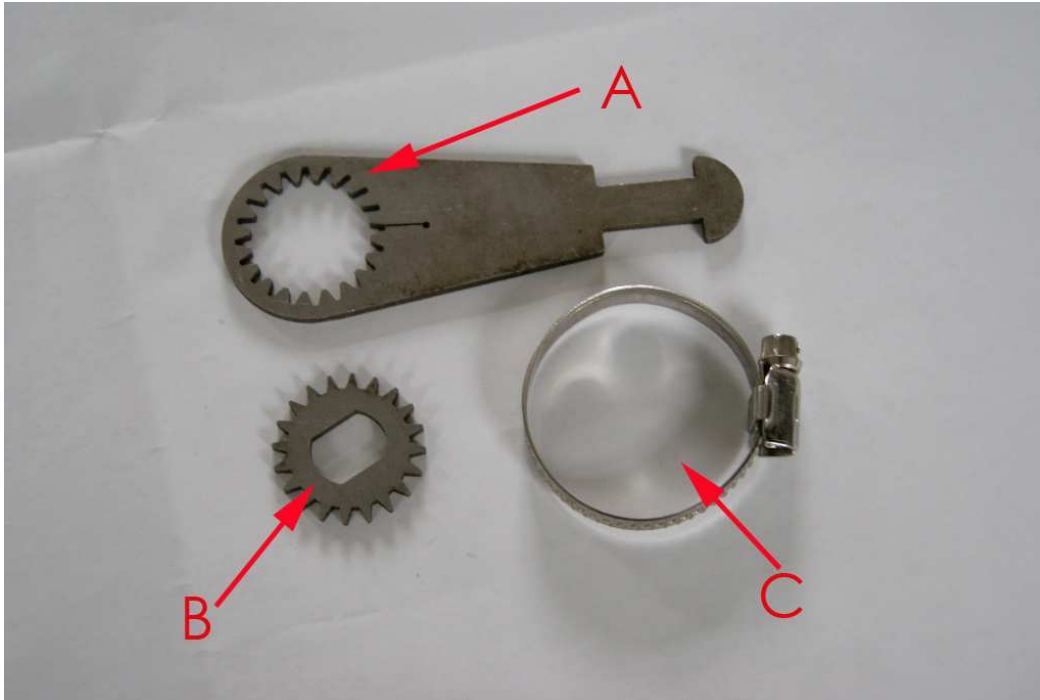

**Step 1.** Put Unit B on the motor axle.

**Step 2.** Put Unit A onto Unit B, Unit A and B will merge into one unit. Make sure that the body of Unit A align perfectly with the fork.

**Step 3.** Put a washer on the motor axle. The washer will lay on top of Unit A and B, lock it with the locking NUT provided with the motor assembly.

**Step 4.** Tighten the Unit A (the groove area) onto the fork with Unit C.

**Done.**

